




Краны шаровые двухходовые EasyFit



Гидравлическая схема:

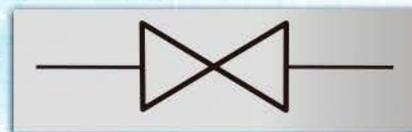

Техническая информация:

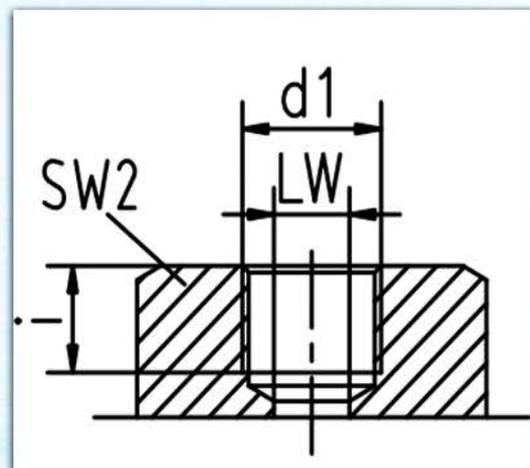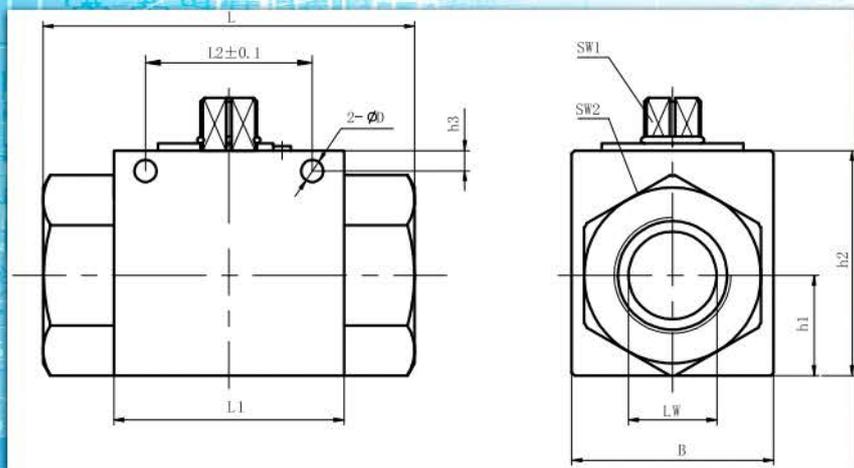

Тип	Давление, бар	DN, mm	LW	RA	d1	i	L	L1	B	H	h1	h2	SW1	SW2
VH2V-G1/8	500	4	6	-	G1/8	14	69	40	25	45	13	33	9	22
VH2V-G1/4	500	6	6	-	G1/4	14	69	40	25	45	14	33	9	22
VH2V-G3/8	500	10	10	-	G3/8	14	72	42	32	49	16	36	9	27
VH2V-G1/2	500	13	12	-	G1/2	14	83	47	35	49	18	38	9	30
VH2V-G1/2	400	16	15	-	G1/2	16	83	48	38	61	19	45	9	32
VH2V-G3/4	315	20	20	-	G3/4	18	95	60	48	70	25	55	12	41
VH2V-G1	315	25	25	-	G1	21	113	65	57	79	29	64	12	50
VH2V-G1 1/4	315	32	32	-	G1 1/4	22	110	84	75	101	38	84	14	60
VH2V-G1 1/2	315	40	38	-	G1 1/2	24	130	91	85	112	43	95	14	70
VH2V-G2	315	50	48	-	G2	26	140	100	104	131	52	113	14	90